

RouterBOARD 11E

Installation Guide and Warranty Information



Specifications

	RouterBOARD 11E
Slots	One PCI Express Mini Card Slot for a 52 pin card
Standards	PCI Express x1 (PCIe), doesn't support USB connectivity
Operation voltage	PCIe 3.3V
Input power	Up to 10W supplied to PCI Express Mini card
LEDs	Three LEDs connected to each MiniPCI card (according to standards)
Dimensions	65mm x 100mm
Temperature	Operational: 0°C to +70°C (32°F to 158°F) Storage: -20°C to +80°C (-4°F to 176°F)
Requirements	Available PCIe slot

Hardware Compatibility Notes

Note that only wireless 802.11a/b/g/n cards are supported in this adapter. It will not work with 3G mini cards due to USB connectivity incompatibility.

Installation

Please check if the system board you want to install the adapter on, and the PCI Express mini cards you will be using with the adapter, are compatible with the adapter. If it is, then follow these steps to install it into the computer:

1. Remove the screw caps (J3) from the adapter and Insert PCIe Mini card in the adapter, securely screwing the card to the base
2. Turn off the computer (remove power cord from ATX power supply and then discharge the power capacitors by pressing power-on button) and remove its cover
3. Firmly insert the adapter into a free PCIe slot
4. Secure this adapter to the chassis, and put the computer cover back

Driver installation may be required only for the PCIe Mini cards you will be using.

Copyright and Warranty Information

Copyright and Trademarks. Copyright 2004-2005 MikroTiks SIA. This manual contains information protected by copyright law. No part of it may be reproduced or transmitted in any form without prior written permission from the copyright holder. RouterBOARD and MikroTik are trademarks of MikroTiks SIA. All trademarks and registered trademarks appearing in this manual are the property of their respective holders.

Hardware. MikroTiks SIA warrants all RouterBOARD series equipment for the term of one year from the shipping date to be free of defects in materials and workmanship under normal use and service. All parts will be repaired or replaced with similar or functionally equivalent parts by MikroTiks SIA during the warranty term, except in case the returned parts have mechanical, electrical or other accidental or intended damages caused by improper use or due to wind, rain, fire or other acts of nature.

Parts (or systems) must be shipped pre-paid to our facility in Riga, Latvia. All items must have a Return Material Authorization (RMA) which you can get by contacting us via email, telephone or fax. RMA must be printed, signed, and enclosed with the shipment, also the RMA number must be written on the package itself. Parts sent without following the proper procedure will be treated as those not to be repaired or replaced due to the above mentioned conditions. Items proved to be free of defects in our lab will be returned to the customer at the customer's expense. Those that do meet the warranty repair requirements will be repaired or replaced, and returned to the customer's location at our expense, extending the warranty term for the time the items are being shipped to and from our facility and replaced or repaired.

Manual. This manual is provided "as is" without a warranty of any kind, expressed or implied, including, but not limited to, the implied warranty of merchantability and fitness for a particular purpose. The manufacturer has made every effort to ensure the accuracy of the contents of this manual, however, it is possible that it may contain technical inaccuracies, typographical or other errors. No liability is assumed for any inaccuracy found in this publication, nor for direct or indirect, incidental, consequential or other damages that may result from such an inaccuracy, including, but not limited to, loss of data or profits. Please report any inaccuracies found to docs@mikrotik.com.