


## How to check light status on GPON Huawei HG8245

### 1. Connection at the back

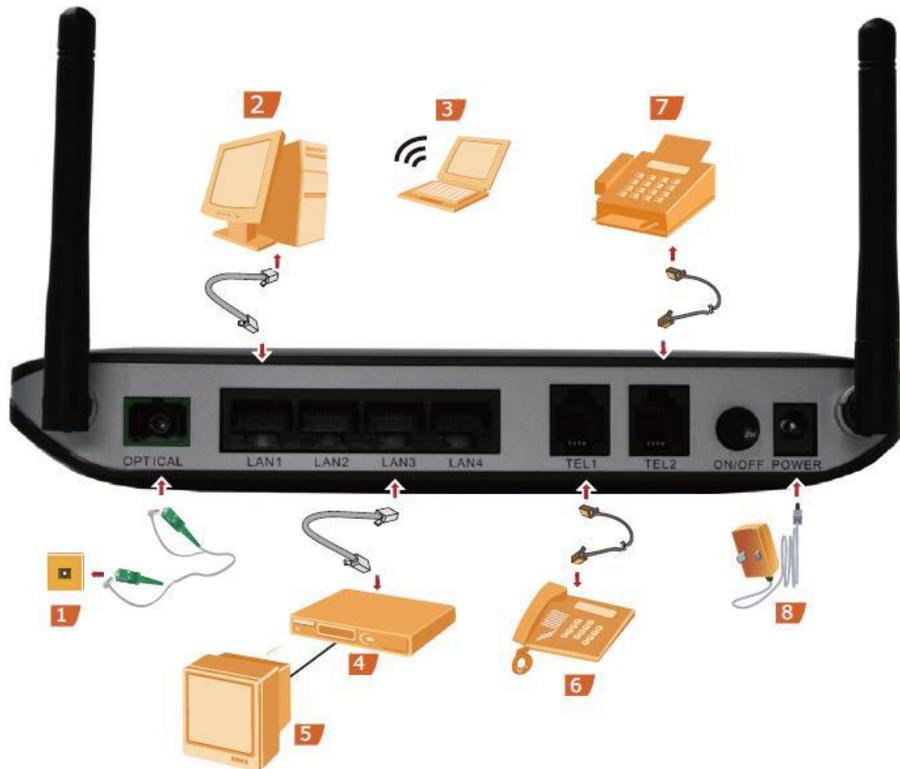

### 2. Connection at the side



- |                                   |                        |                              |
|-----------------------------------|------------------------|------------------------------|
| <b>1</b> Optical port in the wall | <b>2</b> PC            | <b>3</b> Wi-Fi terminal      |
| <b>4</b> IP set-top box (STB)     | <b>5</b> TV set        | <b>6</b> Telephone set       |
| <b>7</b> Fax machine              | <b>8</b> Power adapter | <b>9</b> Backup battery unit |
| <b>10</b> USB storage device      |                        |                              |

Connection points are as following

1. Optical port in the wall = connect Media Optical port
2. PC = connect PC
3. Wi-Fi terminal = connect Wireless
4. IP set-top box (STB) = connect set-top box
5. TV set = connect TV
6. Telephone set = connect telephone set
7. Fax machine = connect Fax
8. Power adapter = connect Power adaptor
9. Backup battery unit = connect backup battery
10. USB storage device = connect USB Storage

3. Modem status only LOS and PON



No.	Status		Description
	PON	LOS	
1.	Off	Off	ONT was disabled by OLT
2.	Off	Blink quickly 2 times/second	ONT is trying to connect OLT
3.	Off	On	The connection between ONT and OLT is already done
4.	Blink 1-2 seconds	Off	The connection between ONT and OLT is not succeeded
5.	Blink quickly 2 times/second	Blink quickly 2 times/second	The device is detected by OLT for ONT connection

**Note:**

ONT = Optical Network Terminal (Modem)

OLT = Optical Line Terminal (System)