



UniFi[®] XG GATEWAY

Enterprise 10G Gateway
Router with DPI

Model: USG-XG-8

QUICK START GUIDE

Introduction

Thank you for purchasing the Ubiquiti Networks® UniFi® Security Gateway XG. This Quick Start Guide is designed to guide you through installation and also includes warranty terms.

Package Contents



UniFi Security Gateway XG



Mounting Brackets
(Qty. 2)



UF-RJ45-1G



Bracket Screws
(Qty. 8)



Mounting
Screws (Qty. 4)



Cage Nuts
(Qty. 4)



Rubber Feet
(Qty. 4)



Power Cord

UniFi Controller System Requirements

- Linux, Mac OS X, or Microsoft Windows 7/8/10
- Java Runtime Environment 7 (or above)
- Web Browser: Google Chrome (Other browsers may have limited functionality)
- UniFi Controller software v5.9 or higher (available at: www.ubnt.com/download/unifi)

 


IMPORTANT: We strongly recommend using UPS backup and power regulation to prevent equipment damage due to stability issues with local AC power.

TERMS OF USE: All Ethernet cabling runs must use CAT5 (or above). It is the professional installer's responsibility to follow local country regulations and indoor cabling requirements.

Network Requirement

A UniFi Cloud Key or management station running the UniFi Controller software, located either on-site and connected to the same Layer-2 network, or off-site in the cloud or NOC

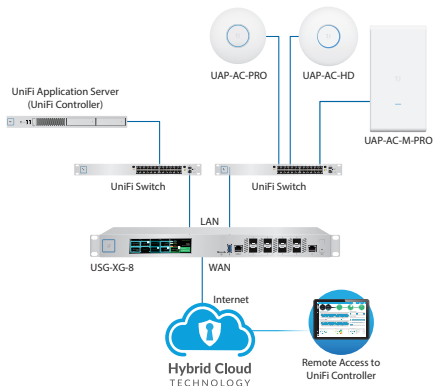


Sample Network Diagram

All UniFi devices support off-site management controllers. For setup details, see the User Guide on our website at: www.ubnt.com/download/unifi

Hardware Overview

 Front Panel Ports



Interface	Description
microSD	Reserved for future use.
USB	Reserved for future use.
Console	RJ45 serial console port for Command Line Interface (CLI) management. Use an RJ45-to-DB9 serial console cable, also known as a rollover cable, to connect the <i>Console</i> port to your computer. Then configure the following settings as needed: <ul style="list-style-type: none">• <i>Baud rate</i> 115200• <i>Data bits</i> 8• <i>Parity</i> NONE• <i>Stop bits</i> 1• <i>Flow control</i> NONE
SFP+ (Ports 1-8)	SFP+ ports are hot-swappable and support 10 Gbps fiber SFP modules.
RJ45 (Port 0)	RJ45 port supports 10/100/1000 Ethernet connections.

Front Panel System LED



System


State	Status
White	Factory defaults, waiting for integration.
Blue	Successfully integrated into a network and working properly.
Flashing White	Bootup in progress.
Flashing Blue	Firmware upgrade is taking place.







 
Front Panel Touch LCM

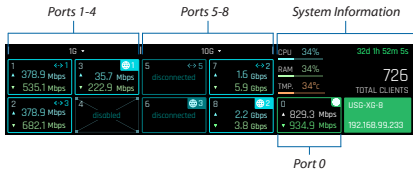Touch LCM




Port Screen



Section of LCM	Information Displayed
Ports 1-4, Ports 5-8	<p>Information on each SFP+ port:</p> <ul style="list-style-type: none"> • Port Speed 1G or 10G <p> Note: There are two groups of ports: ports 1-4 and ports 5-8. All ports in each group operate at the same speed. For example, if port 1 is set to 1G, then ports 2-4 will also operate at 1G.</p> <ul style="list-style-type: none"> • Port Number 1 to 8 • Interface Type  - Primary WAN;  - Other WAN;  - LAN port • Throughput Upload (blue) and download (green) throughput speeds • disconnected Port is disconnected • disabled Port is disabled <p>Select any port to display its <i>Statistics</i> screen.</p>
System Information	<p>Information on the system:</p> <ul style="list-style-type: none"> • CPU and RAM usage percentage (red indicates usage of 90% or greater) • Temperature of CPU in °C (red indicates temperature of 85 °C or greater) • Uptime of the device • Number of clients (active connections) • Host name • IP address of the primary WAN port
Port 0	<p>Information on RJ45 port 0:</p> <ul style="list-style-type: none"> • Interface Type  - Primary WAN;  - Other WAN;  - LAN port • Throughput Upload (blue) and download (green) throughput speeds <p>Select Port 0 to display its <i>Statistics</i> screen.</p>

 Statistics Screen

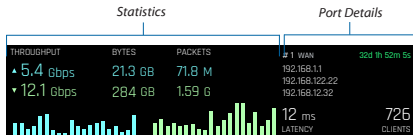

Section of LCM	Information Displayed
Statistics	<p>Statistics on uploaded (blue) and downloaded (green) data on the selected port (SFP+ ports 1-8 or RJ45 port 0):</p> <ul style="list-style-type: none"> • Throughput Total throughput speed in bps/kbps/Mbps/Gbps • Bytes Total bytes (B)* • Packets Total packets* • Bar Graphs Plots of data uploaded and downloaded
Port Details	<p>Details on the selected port (SFP+ ports 1-8 or RJ45 port 0):</p> <ul style="list-style-type: none"> • # <port><type> Port: 0 to 8; Type: WAN or LAN • IP address(es) assigned to the port • Uptime if port is up; or <i>Disabled</i> or <i>Disconnected</i> if port is down • Latency in ms for the Primary WAN or selected port • Number of clients (active connections) for the Primary WAN or selected port

* Units:

k = 2¹⁰ = 1024

M = 2²⁰ = 1,000,000

G = 2³⁰ = 1,000,000,000

T = 2⁴⁰ = 1,000,000,000,000

$$P = 2^{30} \approx 1,000,000,000,000,000$$

Front Panel Button




Button	Description
Reset	Resets to factory defaults. The UniFi Security Gateway XG should be running after bootup is complete. Press and hold the Reset button for about 10 seconds until the <i>System</i> LED starts flashing and then becomes solidly lit. After a few seconds, the LED will turn off, and the UniFi Security Gateway XG will automatically reboot.

Back Panel



The USG-XG-8 includes one hot-swappable AC/DC PSU module. An optional AC/DC PSU module can be installed in the *PSU 2 Module Bay*.

You also have the option to use a DC/DC PowerModule™, model RPS-DC-100W (sold separately).

 **Note:** There are ventilation holes on the sides of the UniFi Security Gateway XG.

Installation Requirements

- Phillips screwdriver
- Standard-sized, 19" wide rack with a minimum of 1U height available
- For indoor applications, use Category 5 (or above) UTP cabling approved for indoor use.
- For outdoor applications, shielded Category 5 (or above) cabling should be used for all wired Ethernet connections and should be grounded through the AC ground of the power supply.

We recommend that you protect your networks from harmful outdoor environments and destructive ESD events with industrial-grade, shielded Ethernet cable from Ubiquiti Networks. For more details, visit: www.ubnt.com/toughcable



WARNING: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.




Note: Although the cabling can be located outdoors, the UniFi Security Gateway XG itself should be housed inside a protective enclosure.

Hardware Installation

The UniFi Security Gateway XG can be placed on a horizontal surface, mounted on a wall, or mounted on a rack.

! **WARNING:** FAILURE TO PROVIDE PROPER VENTILATION MAY CAUSE FIRE HAZARD. KEEP AT LEAST 20 MM OF CLEARANCE NEXT TO THE VENTILATION HOLES FOR ADEQUATE AIRFLOW.

 1. Attach the *Mounting Brackets* to the UniFi Security Gateway XG.

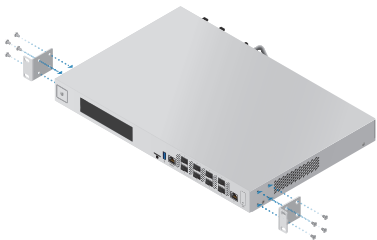

2. Attach the UniFi Security Gateway XG to the rack using the four *Mounting Screws*. (If the rack has square slots, then use the *Cage Nuts* with the *Mounting Screws*.)



3. Connect the *Power Cord* to the *AC/DC PSU Module*.



4. Connect the other end of the *Power Cord* to a power outlet.



Connecting Ethernet to LAN

Connect a UFiber 10 Gbps SFP+ optical module and fiber optic patch cable to SFP+ port 1.



For detailed instructions on using SFP+ ports, refer to *Using SFP+ Ports*.

Using SFP+ Ports

 


Note: Each SFP+ port requires a U-Fiber 10 Gbps SFP+ optical module and a fiber optic patch cable.


For information about compatible fiber SFP+ modules, visit: community.ubnt.com/unifi

To use an *SFP+* port:

1. Remove the protective plug covering the *SFP+* port.
2. Plug a compatible fiber module into the *SFP+* port.

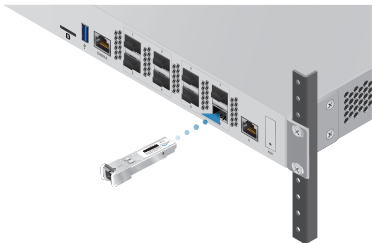

 
3. Connect a fiber optic cable to the fiber module. Then connect the other end of the cable to another fiber device.

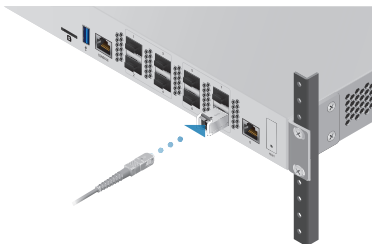


Software Installation

Download the latest version of the UniFi Controller software at: www.ubnt.com/download/unifi

From a management station connected to the same Layer-2 network, launch the installer and follow the on-screen instructions.

 **Note:** If you already have UniFi Controller v5.6 or higher installed, go to the section, *Adopting the UniFi Security Gateway XG*.

 After you have installed the software and run the UniFi Setup Wizard, a login screen will appear for the UniFi Controller management interface. Enter the *Admin Name* and *Password* that you created in the UniFi Setup Wizard. Then click **Login**.

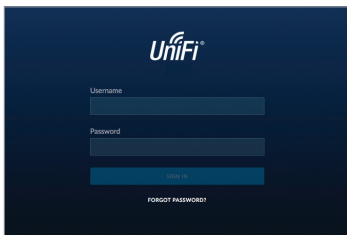

You can manage your network and view network statistics using the UniFi Controller management interface. For information on using the UniFi Controller software, refer to the User Guide located on our website at: www.ubnt.com/download/unifi

Configuring the WAN and LAN Interfaces Before Adoption

 
Prior to adopting the UniFi Security Gateway XG, you can access its Configuration Interface via a web browser to configure the WAN and LAN interfaces and the inform URL.

By default, the *WAN* port is set to *DHCP* so it can obtain its network settings from the service provider. The *LAN* port is set to a static IP of 192.168.1.1/24 with *DHCP Server* enabled.


If the UniFi controller is on the local network, access the Configuration Interface and configure the LAN port's *IP Address* to be on the same subnet as your controller.

To change the interface settings, connect a computer (through a switch) to SFP+ port 1 of the UniFi Security Gateway XG.

1. From a web browser, go to: **https://setup.ubnt.com**



2. The UniFi Security Gateway XG *Settings* window will appear. Click **Configuration** to continue.

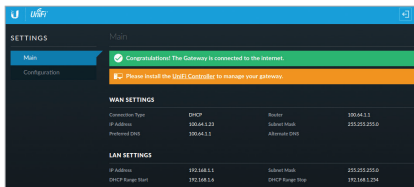A screenshot of the UniFi Security Gateway XG Settings web interface. The interface has a dark theme with a blue header. On the left, there is a sidebar with "Main" and "Configuration" options. The main content area shows a "Main" section with two status messages: a green one saying "Congratulations! The Gateway is connected to the internet." and an orange one saying "Please install the UniFi Controller to manage your gateway." Below these are two sections: "WAN SETTINGS" and "LAN SETTINGS".

WAN SETTINGS			
Connection Type	DHCP	Router	190.44.1.1
IP Address	190.64.1.23	Subnet Mask	255.255.255.0
Preferred DNS	190.64.1.1	Alternate DNS	

LAN SETTINGS			
IP Address	192.168.1.1	Subnet Mask	255.255.255.0
DHCP Range Start	192.168.1.6	DHCP Range Stop	192.168.1.254

- In the *Configuration* window, configure the *WAN Settings*, *LAN Settings*, and *Inform URL* as needed.

The screenshot shows a configuration window titled "Configuration". At the top, there are two status messages: a green bar with a checkmark icon and the text "Congratulations! The Gateway is connected to the internet.", and an orange bar with a warning icon and the text "Please install the UniFi Controller to manage your gateway." Below these are three sections of settings:

 
- WAN SETTINGS**:
 - Connection Type: DHCP (dropdown menu)
 - Preferred DNS: 100.64.1.1 (text input)
 - Alternate DNS: (empty text input)
- LAN SETTINGS ***:
 - IP Address: 192.168.1.1 (text input)
 - Subnet Mask: 255.255.255.0 (text input)
 - DHCP Server: ON (checkbox, checked)
 - DHCP Range: 192.168.1.6 (text input) - 192.168.1.254 (text input)
- CONTROLLER SETTINGS**:
 - Inform URL: http://unifi:8080/inform (text input)

At the bottom left, there are two buttons: "APPLY CHANGES" (highlighted in green) and "CANCEL".

- Click **Apply Changes** to save the changes.

Adopting the UniFi Security Gateway XG

1. From the UniFi Controller dashboard, click **Devices** in the left menu bar.

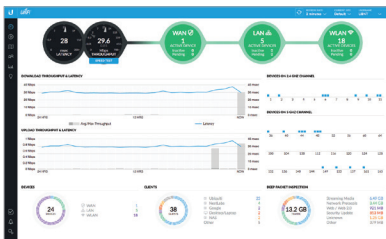

2. On the *Devices* screen, locate the UniFi Security Gateway XG in the list of devices under the *Model* column. To adopt it, click **Adopt**.

The screenshot shows the 'Devices' screen with a table of devices. The columns are: Device Name, IP Address, Status, Model, Version, Uptime, and Actions. The table lists various UniFi devices, including UniFi Security Gateways and UniFi Access Points.

Device Name	IP Address	Status	Model	Version	Uptime	Actions
UniFi Security Gateway-XG	192.168.1.1	Adopted	UniFi Security Gateway-XG	4.2.20-48207	50m 45s	Adopt
UniFi Security Gateway-XG	192.168.1.2	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.3	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.4	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.5	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.6	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.7	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.8	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.9	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.10	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.11	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.12	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.13	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.14	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.15	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.16	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.17	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.18	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.19	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.20	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.21	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.22	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.23	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.24	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.25	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.26	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.27	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.28	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.29	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.30	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.31	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.32	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.33	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.34	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.35	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.36	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.37	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.38	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.39	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.40	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.41	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.42	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.43	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.44	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.45	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.46	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.47	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.48	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.49	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt
UniFi Security Gateway-XG	192.168.1.50	Adopted	UniFi Security Gateway-XG	4.2.20-48207	10m 50s 15s	Adopt


3. The *System LED* on the UniFi Security Gateway XG will turn blue to confirm that it is successfully adopted.


Specifications


USG-XG-8	
Dimensions	442.4 x 285.6 x 43.7 mm (17.42 x 11.24 x 1.72")
Weight	4.435 kg (9.78 lb)
With Mount Brackets	4.535 kg (9.98 lb)
Max. Power Consumption	AC/DC 100W
Power Supply	(2) Hot-Swappable AC/DC or DC/DC 100W PSU (1 AC/DC PSU Included)
Supported Voltage Range	100 - 240VAC
System LED	Status
Touch LCM	4.7" Wide-Viewing Angle True Color TFT-LCD Touch Screen
Processor	MIPS64 16-Core, 1.8 GHz
System Memory	16 GB DDR4 RAM
On-Board Flash Storage	4 GB
Rackmount	Yes, 1U
ESD/EMP Protection	Air: ± 24 kV, Contact: ± 24 kV
Operating Temperature	-5 to 40° C (23 to 104° F)
Operating Humidity	5 to 95% Noncondensing
Certifications	CE, FCC, IC
Interfaces	
Networking	(8) 10 Gbps SFP+ Ports, (1) 1 Gbps RJ45 Ethernet Port
Management	(1) RJ45 Ethernet In-Band, (1) RJ45 Serial Out-of-Band


Safety Notices

1. Read, follow, and keep these instructions.
2. Heed all warnings.
3. Only use attachments/accessories specified by the manufacturer.

 **WARNING:** Failure to provide proper ventilation may cause fire hazard. Keep at least 20 mm of clearance next to the ventilation holes for adequate airflow.

 **WARNING:** To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

 **WARNING:** Do not use this product in location that can be submerged by water.

 **WARNING:** Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.

Electrical Safety Information

1. Compliance is required with respect to voltage, frequency, and current requirements indicated on the manufacturer's label. Connection to a different power source than those specified may result in improper operation, damage to the equipment or pose a fire hazard if the limitations are not followed.
2. There are no operator serviceable parts inside this equipment. Service should be provided only by a qualified service technician.
3. This equipment is provided with a detachable power cord which has an integral safety ground wire intended for connection to a grounded safety outlet.
 - a. Do not substitute the power cord with one that is not the provided approved type. Never use an adapter plug to connect to a 2-wire outlet as this will defeat the continuity of the grounding wire.
 - b. The equipment requires the use of the ground wire as a part of the safety certification, modification or misuse can provide a shock hazard that can result in serious injury or death.
 - c. Contact a qualified electrician or the manufacturer if there are questions about the installation prior to connecting the equipment.
 - d. Protective earthing is provided by Listed AC adapter. Building installation shall provide appropriate short-circuit backup protection.
 - e. Protective bonding must be installed in accordance with local national wiring rules and regulations.

Limited Warranty

www.ubnt.com/support/warranty

The limited warranty requires the use of arbitration to resolve disputes on an individual basis, and, where applicable, specify arbitration instead of jury trials or class actions.

Compliance

FCC

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operations of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This radio transmitter (FCC: SWX-USGXC) has been approved by FCC.

ISED Canada

CAN ICES-3(A)/NMB-3(A)

This device complies with ISED Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This radio transmitter (IC: 6545A-USGXC) has been approved by ISED Canada.

CAN ICES-3(A)/NMB-3(A)

Le présent appareil est conforme aux CNR d'ISDE Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage;
2. l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Le présent émetteur radio (IC : 6545A-USGXG) a été approuvé par ISDE Canada.

RF Exposure Warning

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be located or operating in conjunction with any other antenna or transmitter, except as listed for this product's certification.

Les antennes utilisées pour cet émetteur doit être installé pour fournir une distance de séparation d'au moins 20 cm de toutes les personnes et ne doit pas être situé ou opérant en conjonction avec une autre antenne ou un autre émetteur, sauf dans les cas énumérés à la certification de ce produit.

Australia and New Zealand



Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

CE Marking

CE marking on this product represents the product is in compliance with all directives that are applicable to it.



RoHS/WEEE Compliance Statement



English

European Directive 2012/19/EU requires that the equipment bearing this symbol on the product and/or its packaging must not be disposed of with unsorted municipal waste. The symbol indicates that this product should be disposed of separately from regular household waste streams. It is your responsibility to dispose of this and other electric and electronic equipment via designated collection facilities appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. For more detailed information about the disposal of your old equipment, please contact your local authorities, waste disposal service, or the shop where you purchased the product.

Deutsch

Die Europäische Richtlinie 2012/19/EU verlangt, dass technische Ausrüstung, die direkt am Gerät und/oder an der Verpackung mit diesem Symbol versehen ist, nicht zusammen mit unsortiertem Gemeindeabfall entsorgt werden darf. Das Symbol weist darauf hin, dass das Produkt von regulärem Haushaltsmüll getrennt entsorgt werden sollte. Es liegt in Ihrer Verantwortung, dieses Gerät und andere elektrische und elektronische Geräte über die dafür zuständigen und von der Regierung oder örtlichen Behörden dazu bestimmten Sammelstellen zu entsorgen. Ordnungsgemäßes Entsorgen und Recyceln trägt dazu bei, potentielle negative Folgen für Umwelt und die menschliche Gesundheit zu vermeiden. Wenn Sie weitere Informationen zur Entsorgung Ihrer Altgeräte benötigen, wenden Sie sich bitte an die örtlichen Behörden oder städtischen Entsorgungsdienste oder an den Händler, bei dem Sie das Produkt erworben haben.

Español

La Directiva 2012/19/UE exige que los equipos que lleven este símbolo en el propio aparato y/o en su embalaje no deben eliminarse junto con otros residuos urbanos no seleccionados. El símbolo indica que el producto en cuestión debe separarse de los residuos domésticos convencionales con vistas a su eliminación. Es responsabilidad suya desechar este y cualesquiera otros aparatos eléctricos y electrónicos a través de los puntos de recogida que ponen a su disposición el gobierno y las autoridades locales. Al desechar y reciclar correctamente estos aparatos estará contribuyendo a evitar posibles consecuencias negativas para el medio ambiente y la salud de las personas. Si desea obtener información más detallada sobre la eliminación segura de su aparato usado, consulte a las autoridades locales, al servicio de recogida y eliminación de residuos de su zona o pregunte en la tienda donde adquirió el producto.

Français

La directive européenne 2012/19/UE exige que l'équipement sur lequel est apposé ce symbole sur le produit et/ou son emballage ne soit pas jeté avec les autres ordures ménagères. Ce symbole indique que le produit doit être éliminé dans un circuit distinct de celui pour les déchets des ménages. Il est de votre responsabilité de jeter ce matériel ainsi que tout autre matériel électrique ou électronique par les moyens de collecte indiqués par le gouvernement et les pouvoirs publics des collectivités territoriales. L'élimination et le recyclage en bonne et due forme ont pour but de lutter contre l'impact néfaste potentiel de ce type de produits sur l'environnement et la santé publique. Pour plus d'informations sur le mode d'élimination de votre ancien équipement, veuillez prendre contact avec les pouvoirs publics locaux, le service de traitement des déchets, ou l'endroit où vous avez acheté le produit.

Italiano

La direttiva europea 2012/19/UE richiede che le apparecchiature contrassegnate con questo simbolo sul prodotto e/o sull'imballaggio non siano smaltite insieme ai rifiuti urbani non differenziati. Il simbolo indica che questo prodotto non deve essere smaltito insieme ai normali rifiuti domestici. È responsabilità del proprietario smaltire sia questi prodotti sia le altre apparecchiature elettriche ed elettroniche mediante le specifiche strutture di raccolta indicate dal governo o dagli enti pubblici locali. Il corretto smaltimento ed il riciclaggio aiuteranno a prevenire conseguenze potenzialmente negative per l'ambiente e per la salute dell'essere umano. Per ricevere informazioni più dettagliate circa lo smaltimento delle vecchie apparecchiature in Vostro possesso, Vi invitiamo a contattare gli enti pubblici di competenza, il servizio di smaltimento rifiuti o il negozio nel quale avete acquistato il prodotto.

Declaration of Conformity

български [Bulgarian] С настоящото UBIQUITI NETWORKS декларира, че този тип радиосъоръжение USG-XG-8 е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: **www.ubnt.com/compliance**

Hrvatski [Croatian] UBIQUITI NETWORKS ovime izjavljuje da je radijska oprema tipa USG-XG-8 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: **www.ubnt.com/compliance**

Čeština [Czech] Tímto UBIQUITI NETWORKS prohlašuje, že typ rádiového zařízení USG-XG-8 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: **www.ubnt.com/compliance**

Dansk [Danish] Hermed erklærer UBIQUITI NETWORKS, at radioudstyrstypen USG-XG-8 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: **www.ubnt.com/compliance**

Nederlands [Dutch] Hierbij verklaar ik, UBIQUITI NETWORKS, dat het type radioapparatuur USG-XG-8 conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: **www.ubnt.com/compliance**

English Hereby, UBIQUITI NETWORKS declares that the radio equipment type USG-XG-8 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: **www.ubnt.com/compliance**

Eesti keel [Estonian] Käesolevaga deklareerib UBIQUITI NETWORKS, et käesolev raadioseadme tüüp USG-XG-8 vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: www.ubnt.com/compliance

Suomi [Finnish] UBIQUITI NETWORKS vakuuttaa, että radiolaitetyypin USG-XG-8 on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: www.ubnt.com/compliance

Français [French] Le soussigné, UBIQUITI NETWORKS, déclare que l'équipement radioélectrique du type USG-XG-8 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: www.ubnt.com/compliance

Deutsch [German] Hiermit erklärt UBIQUITI NETWORKS, dass der Funkanlagentyp USG-XG-8 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: www.ubnt.com/compliance

Ελληνικά [Greek] Με την παρούσα ο/η UBIQUITI NETWORKS, δηλώνει ότι ο ραδιοεξοπλισμός USG-XG-8 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: www.ubnt.com/compliance

Magyar [Hungarian] UBIQUITI NETWORKS igazolja, hogy a USG-XG-8 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: www.ubnt.com/compliance

Íslenska [Icelandic] Hér með lýsir UBIQUITI NETWORKS yfir því að USG-XG-8 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Fullur texti ESB samræmisýfirlýsing er að finna á eftirfarandi netfangi: www.ubnt.com/compliance

Italiano [Italian] Il fabbricante, UBIQUITI NETWORKS, dichiara che il tipo di apparecchiatura radio USG-XG-8 è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: www.ubnt.com/compliance

Latviešu valoda [Latvian] Ar šo UBIQUITI NETWORKS deklarē, ka radioiekārta USG-XG-8 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: www.ubnt.com/compliance

Lietuvių kalba [Lithuanian] Aš, UBIQUITI NETWORKS, patvirtinu, kad radijo įrenginių tipas USG-XG-8 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: www.ubnt.com/compliance

Malti [Maltese] B'dan, UBIQUITI NETWORKS, niddikjara li dan it-tip ta' tagħmir tar-radiju USG-XG-8 huwa konformi mad-Direttiva 2014/53/UE. Id-dikjarazzjoni tal-konformità tista' tiġi kkonstultata minn www.ubnt.com/compliance

Norsk [Norwegian] UBIQUITI NETWORKS erklærer herved at utstyret USG-XG-8 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 2014/53/EU. Den fulle teksten til EU-samsvarserklæringen er tilgjengelig på følgende internetadresse: www.ubnt.com/compliance

Polski [Polish] UBIQUITI NETWORKS niniejszym oświadczam, że typ urządzenia radiowego USG-XG-8 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: www.ubnt.com/compliance

Português [Portuguese] O(a) abaixo assinado(a) UBIQUITI NETWORKS declara que o presente tipo de equipamento de rádio USG-XG-8 está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: www.ubnt.com/compliance

Română [Romanian] Prin prezenta, UBIQUITI NETWORKS declară că tipul de echipamente radio USG-XG-8 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: www.ubnt.com/compliance

Slovenčina [Slovak] UBIQUITI NETWORKS týmto vyhlasuje, že rádiové zariadenie typu USG-XG-8 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: www.ubnt.com/compliance

Slovenščina [Slovenian] UBIQUITI NETWORKS potrjuje, da je tip radijske opreme USG-XG-8 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: www.ubnt.com/compliance

Español [Spanish] Por la presente, UBIQUITI NETWORKS declara que el tipo de equipo radioeléctrico USG-XG-8 es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: **www.ubnt.com/compliance**

Svenska [Swedish] Härmed försäkras UBIQUITI NETWORKS att denna typ av radioutrustning USG-XG-8 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: **www.ubnt.com/compliance**

Online Resources

Website www.ubnt.com

Support help.ubnt.com

Community community.ubnt.com

Downloads downloads.ubnt.com

Ubiquiti Networks, Inc.
685 Third Avenue, 27th Floor
New York, NY 10017
USA



©2016-2018 Ubiquiti Networks, Inc. All rights reserved. Ubiquiti, Ubiquiti Networks, the Ubiquiti U logo, the Ubiquiti beam logo, TOUGHCable, and UniFi are trademarks or registered trademarks of Ubiquiti Networks, Inc. in the United States and in other countries. All other trademarks are the property of their respective owners.

A1102918