

**TOTO LINK**  
The Smartest Network Device

# Quick Installation Guide

## AX1800 Dual Band Wireless USB Card

Model: X6100UA


Copyrights © TOTOLINK All rights reserved. Website: <http://www.totolink.net>  
Information in this document is subject to change without prior notice.

### 1. Connect the USB Card to the computer



LAN Adapter Physical Connection Diagram

Please insert the USB Card to your computer's USB interface, then install the driver.

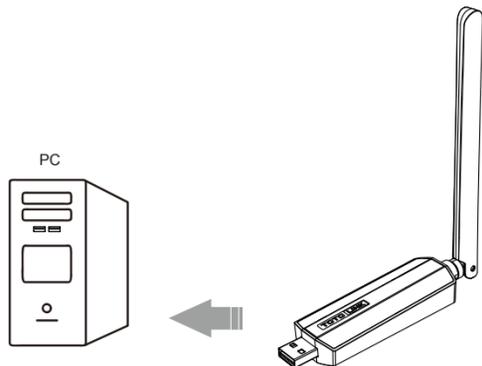

**Note**  
Computer found the wireless LAN adapter hardware, need to install the driver.


### 2. Install the Driver to Your Computer



Please turn off the firewall and anti-virus software temporarily when installing the driver.

Method 1: Install the driver using a disk (If your computer does not have drives, please use Method 2 to install the driver).

- Put into the CD.
- Double-click the CD drive letter, choose the corresponding model with correct system type, then click "Install".

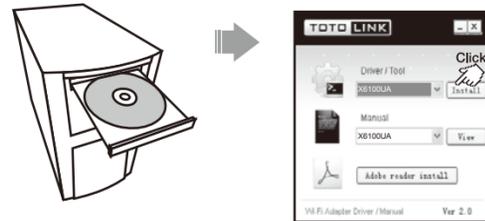

- Waiting for the installation.



- Remove disks from drives, and then click "Finish" to complete setup. The computer will restart soon. If you want to restart your computer later, select the second item and click "Finish".



Method 2: Download the driver from the website


1. Open a computer browser and enter: <http://totolink.net> in the address bar, enter the model: X6100UA in the search bar at the upper right corner, and then click the search symbol. In the search results page, click the USB card picture to enter the page of details.



2. Enter the download page as shown below, click the download symbol corresponding to the driver file, and then download the USB card driver.



3. After unzipping the file, double-click to open the setup file: **Setup.exe**, wait for a moment, and click "Finish".

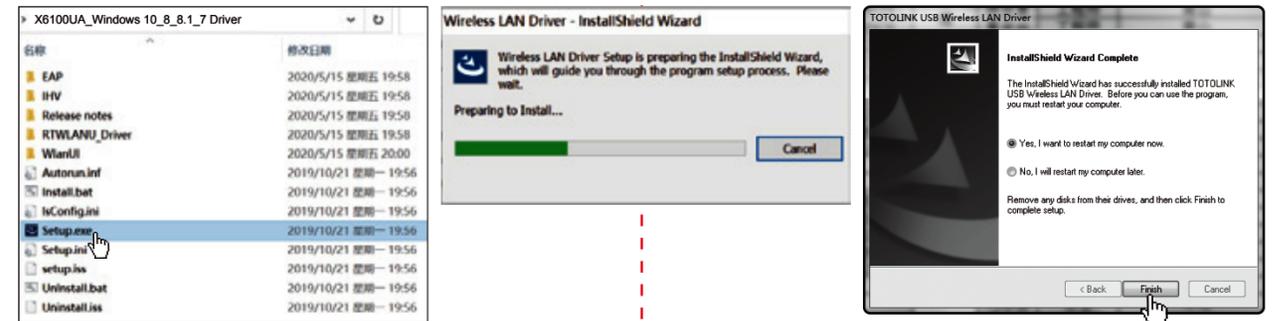

### 3. Connect to Wireless Router (For Windows 10)

- Click the network icon at the bottom right of your PC.




- Search for 2.4GHz or 5GHz Wi-Fi SSID.(P2)

- Choose your Router's SSID, click Connect. (P3)

- Enter password of the Wi-Fi.(P4)

- Wi-Fi connected successfully.(P5)

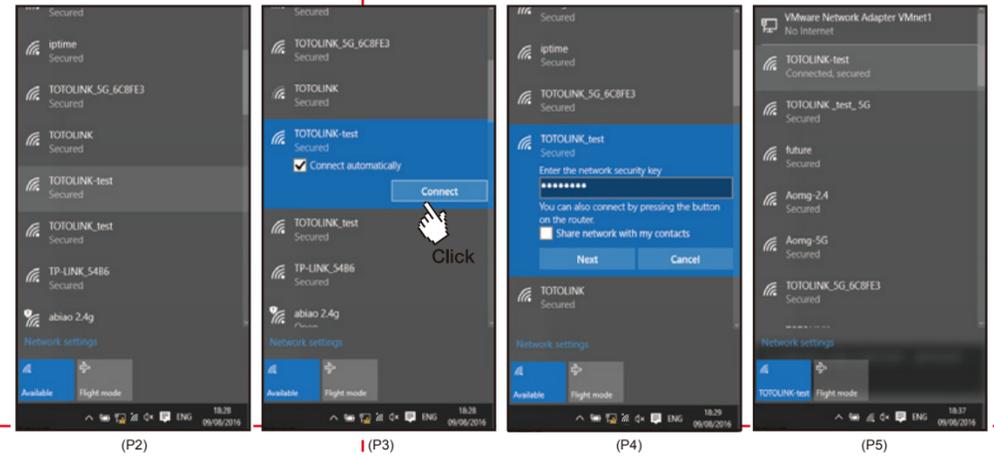

### 4. FAQs

**1. Why after installing USB card and driver, the lower right corner of computer still prompt USB card does not exist?**

It is possible that the computer did not recognize your USB card, please change the USB interface and try it again. Another possibility is the USB card was blocked by the anti-virus software during the process of installing the driver. It is recommended to close the firewall and anti-virus software temporarily when installing the driver, and open it after the driver is installed.

**2. After inserting the wireless network card to install the driver, the icon is displayed, the network cannot be connected, and the network is unavailable.**

Right-click the open icon, select "Open and Network Sharing Center", open "Change Adapter Settings" in the upper-left corner of the page, and confirm that the wireless network card adapter is on. If it is closed, select the corresponding network card and right-click "Enable".

**3. How to place the antenna to get the best wireless signal?**

For the best Internet experience, keep the NIC antenna perpendicular to the horizontal plane.

### FCC warning

**FCC Statement**  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Caution**  
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Radiation Exposure Statement**  
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Manufacturer: ZIONCOM ELECTRONICS (SHENZHEN) LTD.  
Address: Room 702, Unit D, 4 Building Shenzhen Software Industry Base, Xuefu Road, Nanshan District, Shenzhen, Guangdong, China