



## Ubiquiti EP-R6 | Router | EdgeMAX EdgePoint, 5x RJ45 1000Mb/s PoE, 1x SFP



link to the product:

<https://www.batna24.com/de/p/router/ubiquiti-ep-r6-router-edgemax-edgepoint-5x-rj45-1000mb-s-poe-1x-sfp>

Price: **466,12 zł** gross / 378,96 zł net



Manufacturer: UBIQUITI


Referention number: DNXEKOHQLRMNGI



### Full product description


### Intelligenter WISP-Kontrollpunkt mit FiberProtect™

**EdgePoint** Ubiquiti steht für eine Reihe von Produkten, die als erste **CIS-Checkpoint-Geräte** auf dem Markt konzipiert wurden. Es verfügt über **EdgeMAX-Routing-Funktionen**, bietet Informationsübertragung über Glasfaserkabel und umfassende Stromversorgungsmöglichkeiten. EdgePoint ist mit der **FiberProtect-Funktion** ausgestattet, die Schäden durch elektrostatische Entladung (ESD) eliminiert und elektromagnetische **Interferenzen** (EMI) **reduziert**, wodurch die Datenqualität bei Fernverbindungen deutlich verbessert wird.

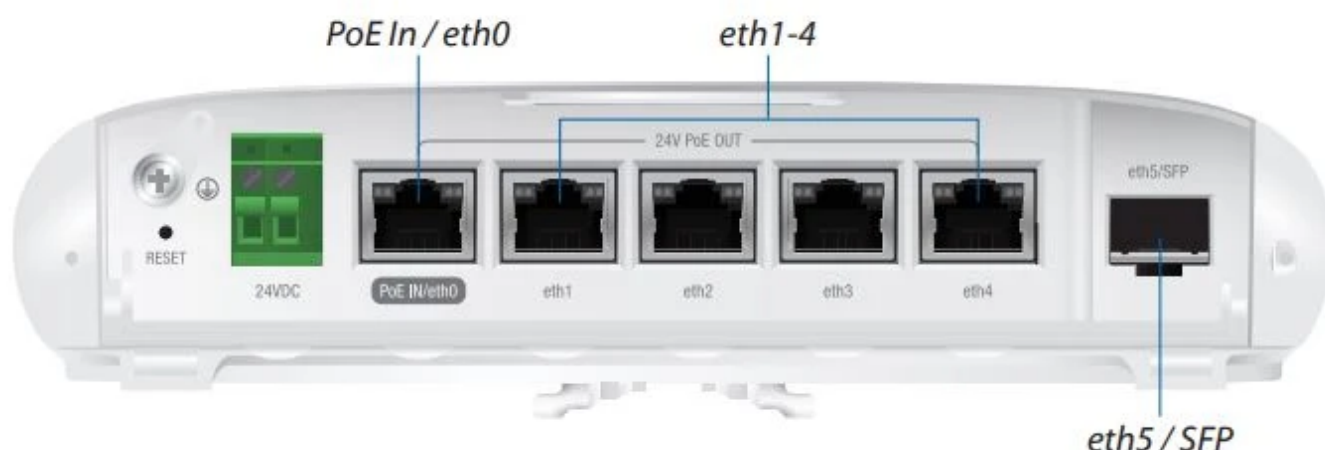


### Intuitive Benutzeroberfläche

EdgePoint bietet eine grafische Benutzeroberfläche, die für eine bequeme Verwendung und einfache Einrichtung konzipiert ist. Der Zugang ist über den Netzwerkanschluss und die Website möglich. Die intuitive Verwaltung des Geräts erfolgt über eine virtuelle Portansicht, die physische Konnektivität, Geschwindigkeit und Status anzeigt.

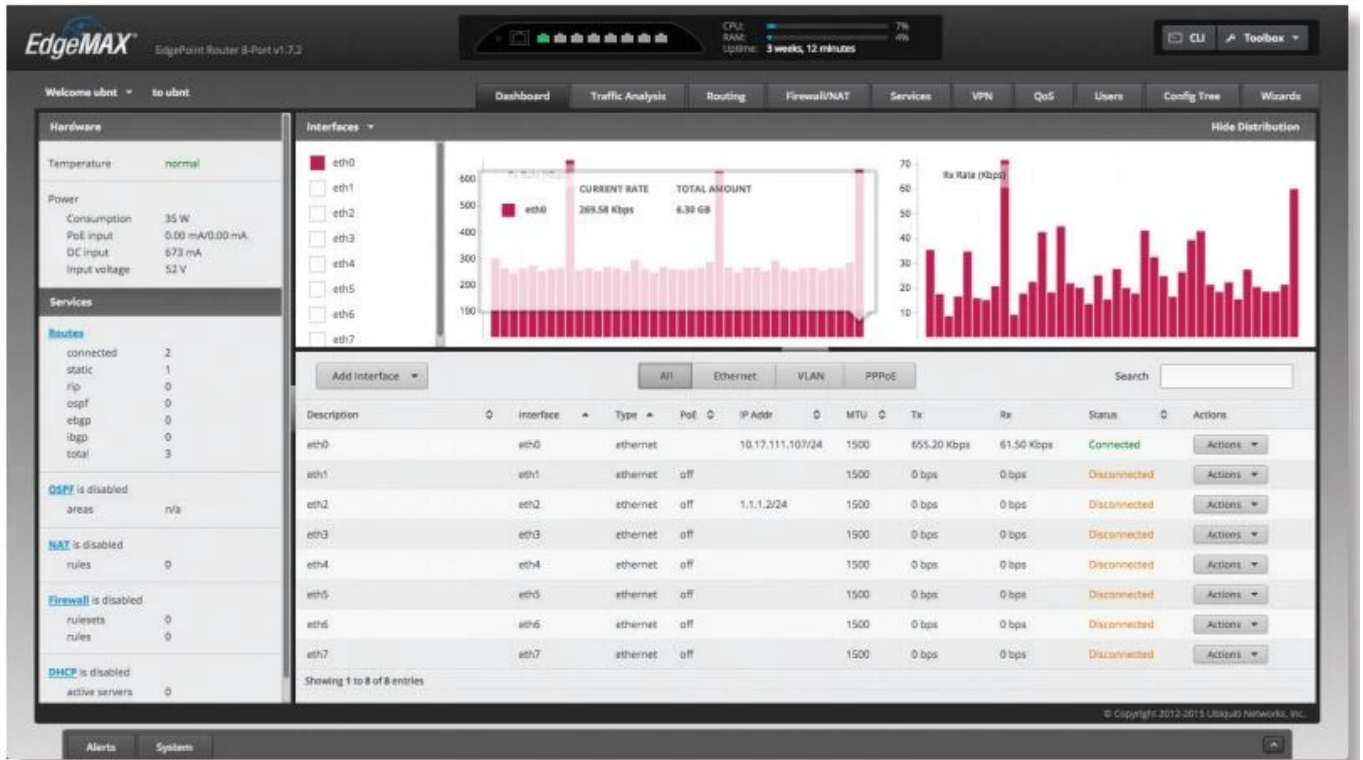

## EdgeOS - fortschrittliches Betriebssystem mit zuverlässigen Funktionen

- VLAN-Schnittstellen zur Netzwerksegmentierung
- Unterstützung statischer Routen und Routing-Protokolle: OSPF, RIP und BGP
- Firewall und NAT-Regeln
- DHCP-Dienste
- Dienstqualität (QoS)
- Werkzeuge zur Netzwerkverwaltung und -überwachung
- Administrator und Konto-Benutzer
- Umfassende IPv6-Unterstützung

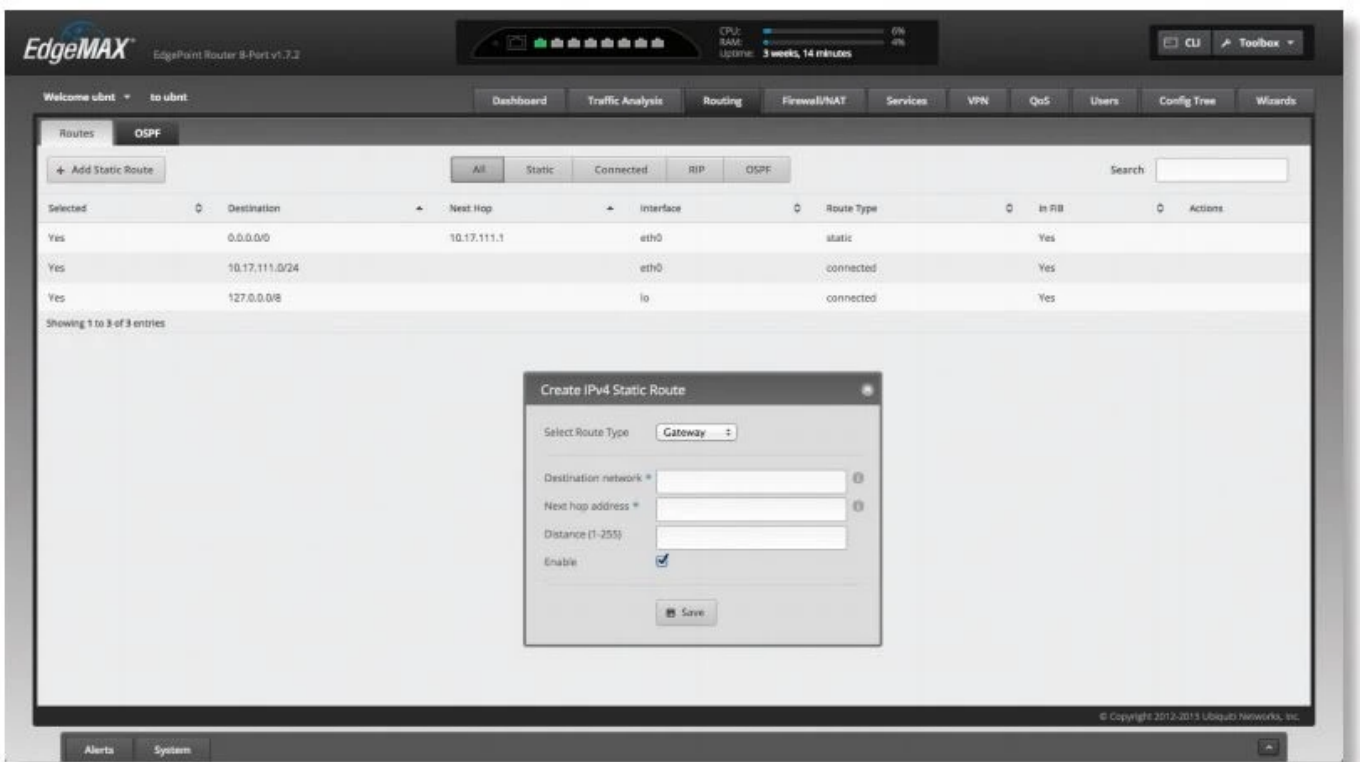

## Konfiguration über CLI

CLI bietet eine schnelle und flexible Befehlszeilenkonfiguration. Es ist möglich, Einstellungen zu verwalten, alle erweiterten Funktionen zu

überwachen und direkten Zugriff auf Standard-Linux-Tools, Shell-Befehle und den Zugriff auf CLI über **SSH**, **Telnet** zu haben.

```
CLI

Welcome to EdgeOS

By logging in, accessing, or using the Ubiquiti product, you
acknowledge that you have read and understood the Ubiquiti
License Agreement (available in the Web UI at, by default,
http://192.168.1.1) and agree to be bound by its terms.

ubnt login: ubnt
Password:
Last login: Sun Jun  1 10:08:30 UTC 2014 on pta/0
Linux 3.10.14-UBNT #1 SMP Mon Dec 15 12:14:34 PST 2014 mips
Welcome to EdgeOS
ubnt#ubnt:~$ show
arp                firewall          login            tech-support
bridge             flow-accounting  set             shot
configuration      hardware         stp             update
constrack          history          openvpn         upnp2
date               host             pppoe-server    users
debugging          incoming         queuing         version
dhcp               interfaces       reboot          vpa
dhcpv6             ip               route-map       vrrp
dhcpv6-pd          ipv6             shutdown        webproxy
disk               lldp             snmp            zebra
dns                load-balance     system
file               log              table

ubnt#ubnt:~$ show
Possible completions:
arp                Show Address Resolution Protocol (ARP) information
bridge             Show bridging information
configuration      Show running configuration
constrack          Show constrack entries in the constrack table
date               Show system date and time
debugging          Show route protocol debugging flags
dhcp               Show Dynamic Host Configuration Protocol (DHCP) information
dhcpv6             Show status related to DHCPv6
dhcpv6-pd          Show status related to DHCPv6 Prefix Delegation
disk               Show status of disk device
dns                Show Domain Name Server (DNS) information
file               Show files for a particular image
firewall           Show firewall information
flow-accounting    Show flow accounting statistics
hardware           Show system hardware details
history            Show command history
host               Show host information
incoming           Show ethernet input-policy information
interfaces         Show network interface information
ip                 Show IPv4 routing information
```