



Ubiquiti EP-R6 | Router | EdgeMAX EdgePoint, 5x RJ45 1000Mb/s PoE, 1x SFP



link to the product:

<https://www.batna24.com/it/p/router/ubiquiti-ep-r6-router-edgemax-edgepoint-5x-rj45-1000mb-s-poe-1x-sfp>

Price: **466,12 zł** gross / 378,96 zł net



Manufacturer: UBIQUITI


Referention number: DNXEKOHQLRMNGI



Full product description


Checkpoint WISP intelligente con FiberProtect™.

EdgePoint Ubiquiti è l'acronimo di una serie di prodotti che sono stati progettati come i primi dispositivi sul mercato del tipo **WISP**. Ha funzioni di routing **EdgeMAX**, fornisce la trasmissione di informazioni attraverso fibre ottiche e capacità di alimentazione completa. EdgePoint è dotato della funzione **FiberProtect**, che elimina i danni causati dalle scariche elettrostatiche (ESD) e **riduce le interferenze elettromagnetiche** (EMI), migliorando significativamente la qualità del segnale dati per le connessioni a lunga distanza.

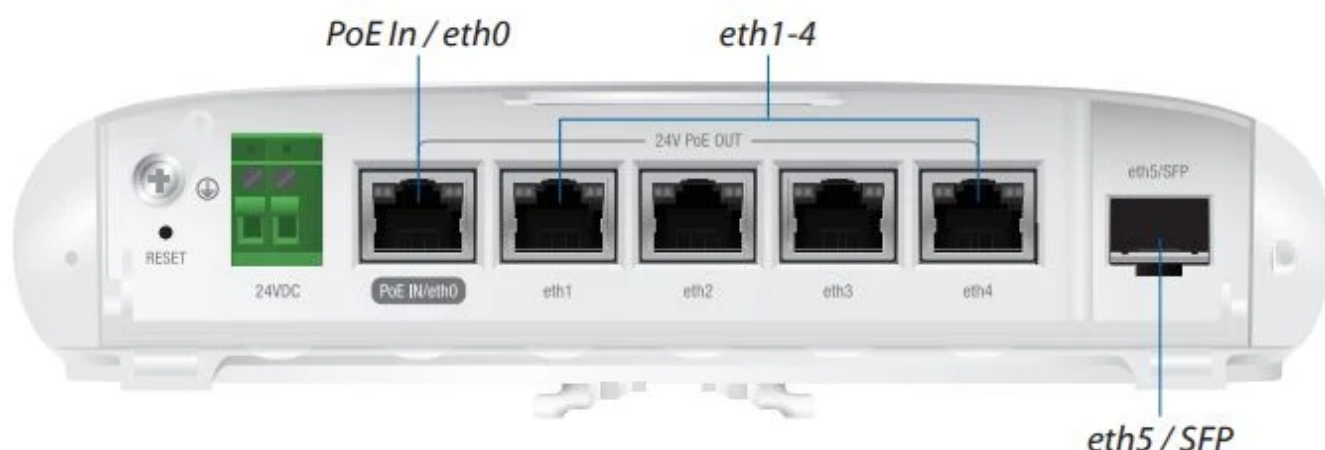


Interfaccia utente intuitiva

EdgePoint fornisce un'interfaccia grafica progettata per un comodo utilizzo e una facile configurazione. Vi si può accedere attraverso la porta di rete e il sito web. La gestione intuitiva del dispositivo avviene attraverso una vista virtuale della porta che visualizza la connettività fisica, la velocità e lo stato.

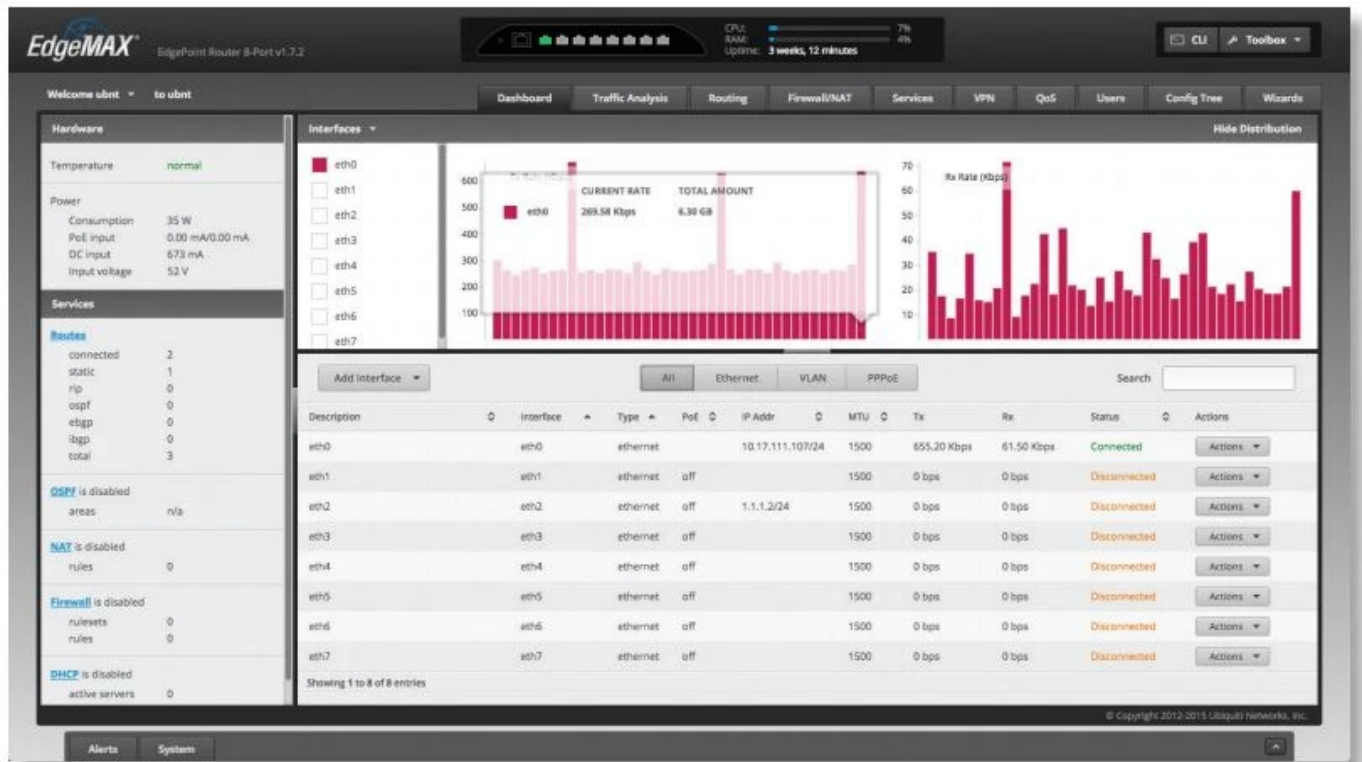

EdgeOS - sistema operativo avanzato con caratteristiche affidabili

- Interfacce VLAN per la segmentazione della rete
- Supporto di percorsi statici e protocolli di routing: OSPF, RIP e BGP
- Firewall e regole NAT
- Servizi DHCP
- Qualità del servizio (QoS)
- Strumenti per l'amministrazione e il monitoraggio della rete
- Amministratore e utente del conto
- Supporto completo IPv6

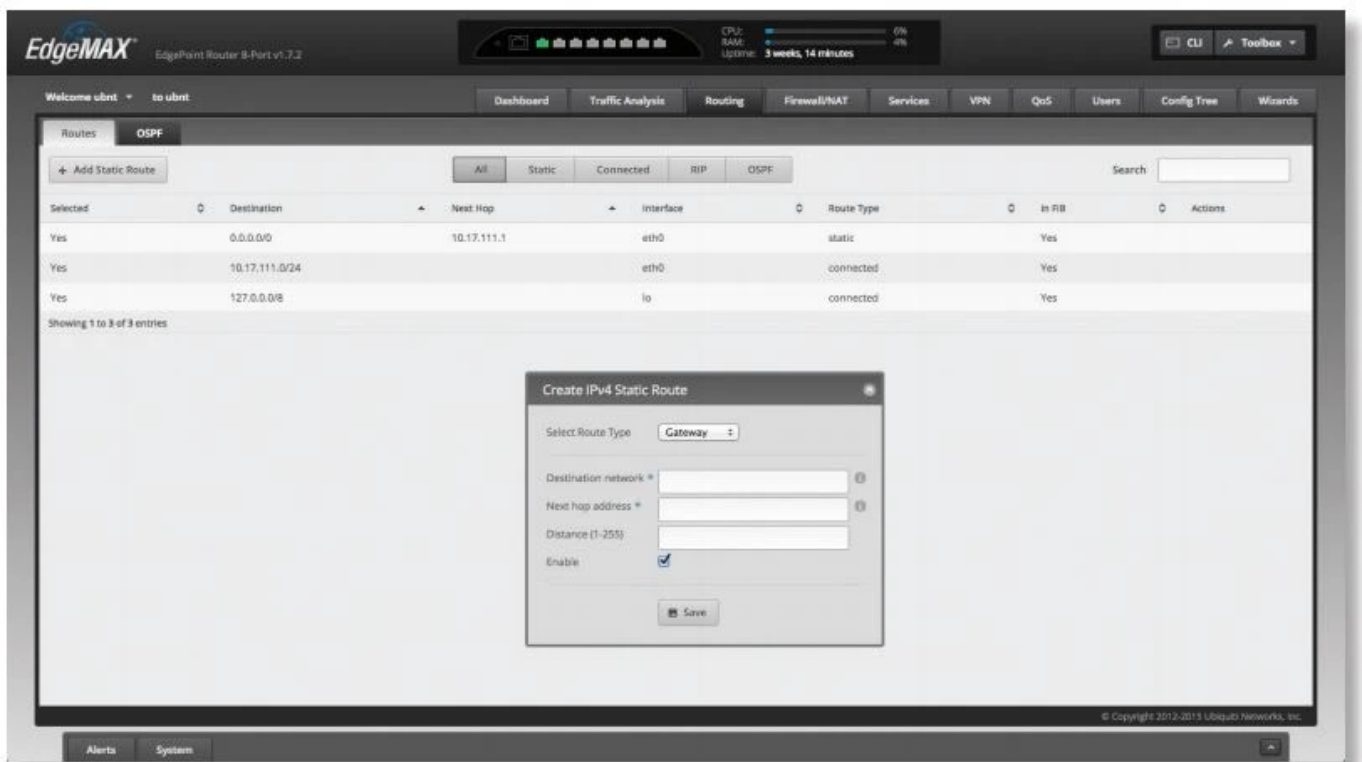

Configurazione tramite CLI

CLI fornisce una configurazione rapida e flessibile della linea di comando. E' possibile gestire le impostazioni, monitorare tutte le funzioni

avanzate e avere accesso diretto agli strumenti standard di Linux, ai comandi della shell e accedere alla CLI via **SSH, Telnet..**

```
CLI

Welcome to EdgeOS

By logging in, accessing, or using the Ubiquiti product, you
acknowledge that you have read and understood the Ubiquiti
License Agreement (available in the Web UI at, by default,
http://192.168.1.1) and agree to be bound by its terms.

ubnt login: ubnt
Password:
Last login: Sun Jun 1 10:08:30 UTC 2014 on pta/0
Linux 3.10.14-ubnt #1 SMP Mon Dec 15 12:14:34 PST 2014 mips
Welcome to EdgeOS
ubnt#ubnt:~$ show
arp                firewall          login            tech-support
bridge             flow-accounting  nat              snort
configuration      hardware         sip              update
conntrack          history         openvpn          upnp2
date               host            pppoe-server     users
debugging          incoming        queuing          version
dhcp               interfaces      reboot           vpa
dhcpv6             ip              route-map        vrrp
dhcpv6-pd          ipv6            shutdown         webproxy
disk               lldp            snmp             zebra
dns                load-balance    system
file               log             table

ubnt#ubnt:~$ show
Possible completions:
arp                Show Address Resolution Protocol (ARP) information
bridge             Show bridging information
configuration      Show running configuration
conntrack          Show conntrack entries in the conntrack table
date               Show system date and time
debugging          Show route protocol debugging flags
dhcp               Show Dynamic Host Configuration Protocol (DHCP) information
dhcpv6             Show status related to DHCPv6
dhcpv6-pd          Show status related to DHCPv6 Prefix Delegation
disk               Show status of disk device
dns                Show Domain Name Server (DNS) information
file               Show files for a particular image
firewall           Show firewall information
flow-accounting    Show flow accounting statistics
hardware           Show system hardware details
history            Show command history
host               Show host information
incoming           Show ethernet input-policy information
interfaces         Show network interface information
ip                 Show IPv4 routing information
```